


TIP OF THE MONTH SEPTEMBER 2008

PIN HOOK PLACEMENT FOR RINGS

When the drapery pleats need to hook into the screw eye of the pole “rings”, plan for the pin hook to be low enough so the top of the drapery will touch the bottom of the ring. If the drapery extends above the bottom of the ring, the ring will cause the pleat to tilt.

If for some reason you want the pleat to cover all (if they are small) or part of the rings, leave open about 1” or 1 1/2” at the back of the pleat. This will allow the pleat to “hug” the ring.

Keep in mind that you will not be able to hand tack the top of the pleat. This gives the pleats a more casual look.

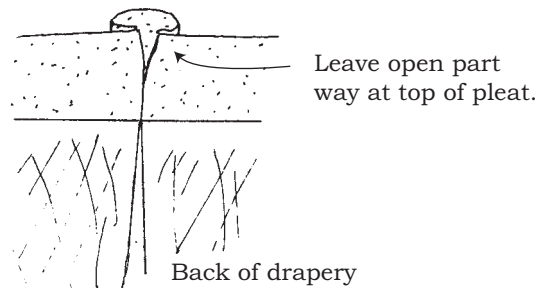

Taken (in part) from
M'Fay Workroom Manual,
Supplement 7